

S9V2 SERIES REPAIR PARTS REV. 12/26/2018

PART NUMBER	DESCRIPTION	S9V2B040U3	S9V2B060U3	S9V2B080U3	S9VC100U4	S9VC120U5
BLW01401	BLOWER; INDUCER, 2 STAGE,	X	X	X	X	X
BNR01233	BURNER	X	X	X	X	X
CNT07721	CONTROL BOARD	X	X	X	X	X
IGN00152	IGNITOR	X	X	X	X	X
MOD01574	PERSONALITY MODULE	X	X	X	X	X
MOT16956	MOTOR 1/2 HP	X	X			
MOT16957	MOTOR 3/4 HP			X	X	
MOT16958	MOTOR 1.0 HP					X
SEN02400	FLAME SENSOR (NG)	X	X	X	X	X
SEN02662	FLAME SENSOR (LP)	X	X	X	X	X
SWT01649	REVERSE FLOW (RAF)		X	X	X	X
SWT03924	PRESSURE SWITCH (PS1)	X	X	X	X	X
SWT03926	CONDENSATE PRESSURE	X	X	X	X	X
SWT03927	INDUCER LIMIT	X			X	X
SWT03937	THERMAL SWITCH (TCO)			X		
SWT03938	THERMAL SWITCH (TCO)				X	
SWT03939	THERMAL SWITCH (TCO)		X			
SWT03940	THERMAL SWITCH (TCO)					X
SWT03964	INDUCER LIMIT		X			
SWT03965	INDUCER LIMIT			X		
SWT03967	FLAME ROLL OUT (FRS1)		X	X	X	X
SWT03968	FLAME ROLL OUT (FRS2)		X	X	X	X
SWT03970	PRESSURE SWITCH (PS2)					X
SWT03971	PRESSURE SWITCH (PS2)			X		
SWT03980	REVERSE FLOW (RAF)	X				
SWT03982	REVERSE FLOW (RAF-1)		X	X	X	X
SWT03983	REVERSE FLOW (RAF-1)	X				
SWT03986	THERMAL SWITCH (TCO)	X				
SWT03987	FLAME ROLL OUT (FRS1)	X				
SWT03988	FLAME ROLL OUT (FRS2)	X				
SWT03992	PRESSURE SWITCH (PS2)		X		X	
SWT04009	PRESSURE SWITCH (PS2)	X				
TRR02736	TRANSFORMER	X	X	X	X	X
VAL09030	TX-VALVE	X	X	X	X	X